



Care and Set-up of Your Clear Sneeze and Cough Shields

Rule #1: NEVER use paper products to clean the Shields! Microfiber cloths work best.

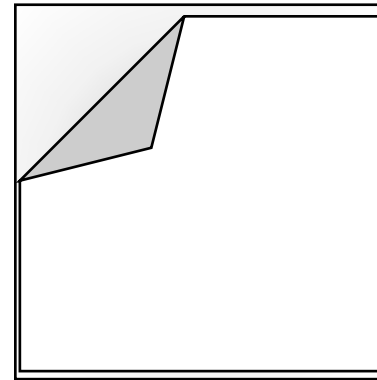


Rule #2: DO NOT remove the protective film until you are ready to insert the part into the Corner Connectors. If needed, lay plastic on soft surfaces only!

Shield With No Opening for Wires

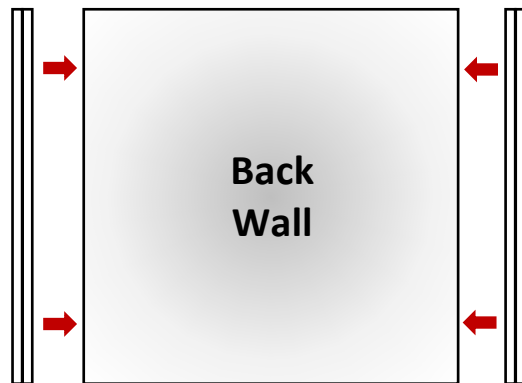


Stand the Back wall upright. Insert the Corner Connectors. (This can be done by laying the Back Wall flat, but it must be on a soft surface to avoid scratching the plastic surface)

Shield With Opening for Wires

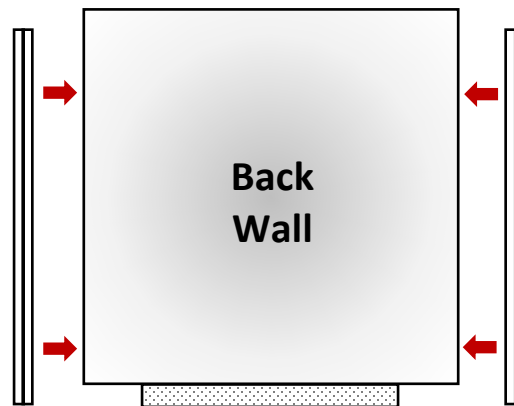

Stand the Back wall upright. Place a board or book under the Back Wall. Insert the Corner Connectors. (This can be done by laying the Back Wall flat, but it must be on a soft surface to protect the plastic surface)

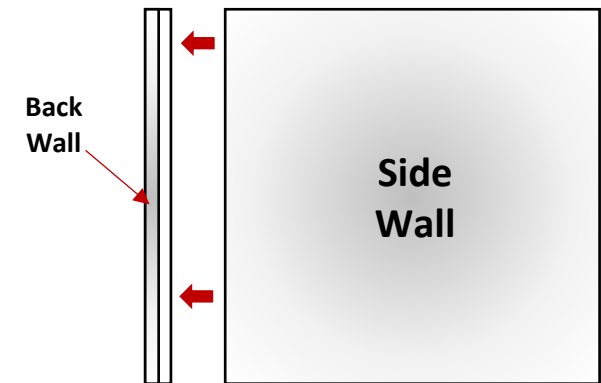

Insert the Side Walls into the Back Wall with Corner Connectors. **For use with Privacy Shields use supplied Clips on Side Walls to attach Insert.**

Place the yellow "Corner Protectors" on the two exposed corners